

PRINTING on HEAVY PAPER

Use the Manual Feed Slot rather than the Tray feeder if you are printing on paper that is 300 gsm or heavier. This provides a straight-through paper path so the paper will not have to bend and curl around.

In the Epson 4880 printer:

- place a sheet of paper into the Manual Sheet Feed slot at the top rear of the printer
in front of the round roll paper holder

- adjust the paper width 'stop' so the paper is tight against the right side

 - make sure the paper is straight and square

- hit the paper feed button on the front panel

 - fourth from the left, that looks like a down arrow

- wait for the paper to feed into the printer and be adjusted to the proper starting position

- make sure the icon on the left of the display show **CUT SHEET** rather than **ROLL**

place small pictures of the icons here>>>>

wait for the for the display to say **READY**

In the Print Settings Window:

- set the Paper Setup to Manual Feed (not Paper Tray or Roll) [default = Roll]

- all other settings are the same...

- hit [**SAVE**] to return to the Photoshop Print Setup window

- hit [**PRINT**] to make a print